ShoreTel IP Phone 480/480g Quick Reference

PHONE OPERATION

Place Calls

Use the speakerphone or a headset



Use the Directory

Make a conference call

Make a call from History

Confer


Consult

Use the Intercom (through Directory)




Answer Calls


Answer a call

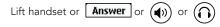

Send a call to voicemail

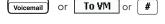

Divert an incoming call

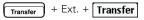

Adjust volume of handset, headset, or speakerphone when off hook; adjust ringer volume when on hook



Answer call waiting (incoming call) Pick up a call for another extension Press green blinking call appearance button or **Answer**



Interact with Calls

Mute a call

Place a call on hold

or press call appearance button

Take a call off hold

or press orange blinking call appearance button

Transfer a call



Join calls

Join

Park a call on another extension

Park + Ext.

Unpark a call

Unpark | + Ext.

VOICEMAIL

Check visual voicemail

Log in to voicemail main menu

Log in from another extension

EXTENSION ASSIGNMENT

Using Phone Interface

Assign ext. to Available or Anonymous phone


Unassign extension



Assign your ext. to an assigned phone

Using Voicemail System

Change ext. assignment

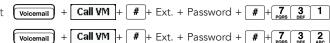

Unassign extension **CUSTOMIZE YOUR PHONE**

Select a ringtone




Change call handling mode (CHM)



Change CHM and call forwarding




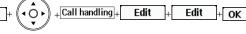

Change automatic off-hook setting




Change time zone

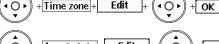

+ Time zone -

Edit

Log in or out of workgroup

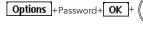



TROUBLESHOOTING

View phone information




Reboot your phone



Note: For details about using the phone, see the ShoreTel IP Phone 480/480g User Guide.



ShoreTel IP Phone 480/480g Quick Reference

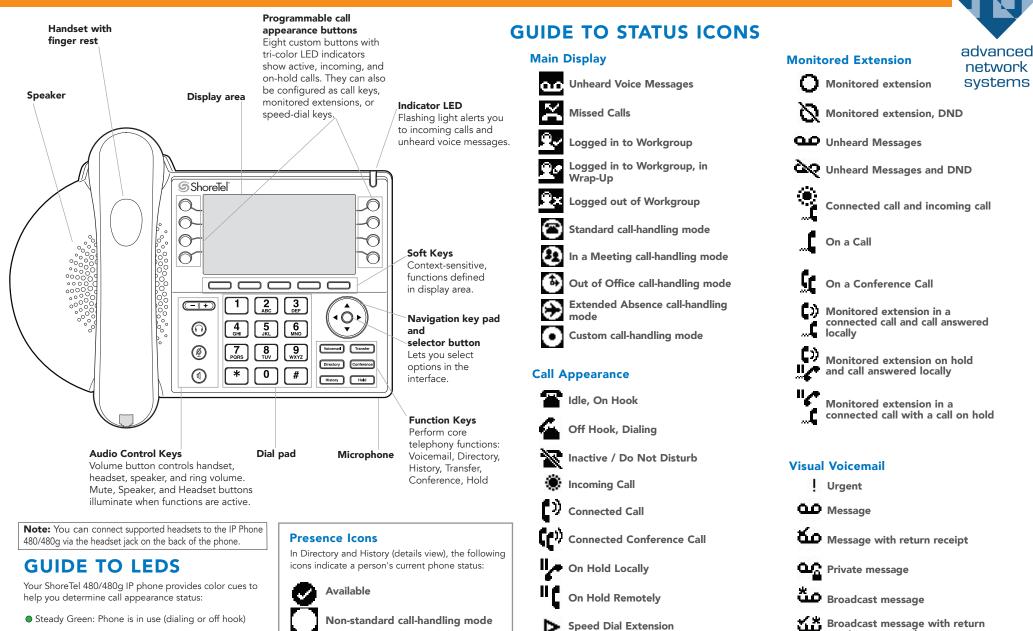

Speed Dial Extension with DND

Call is being recorded

Whisper mute is active

On hold or has a call parked

Do not disturb

On a Call

receipt requested

Private broadcast message

Private message with return

Private broadcast message with return receipt requested

Do Not Disturb

Blinking Green: Incoming call

ightharpoonup Blinking Orange: On hold or call parked

party (applies to BCA and Extension Monitor)

Steady Orange: Extension's call handling mode set to

• Steady Red: Monitored extension is in use by other